 


ATMT
TECHNOLOGY AT ITS BEST
MP170
DAB/MP3 Player
Quick Start Guide

Note : This product is DRM compatible so will play licensed, copyright protected, WMA files downloaded from the internet.

Windows Media Player can be used to see if files are copy protected.

Player Overview

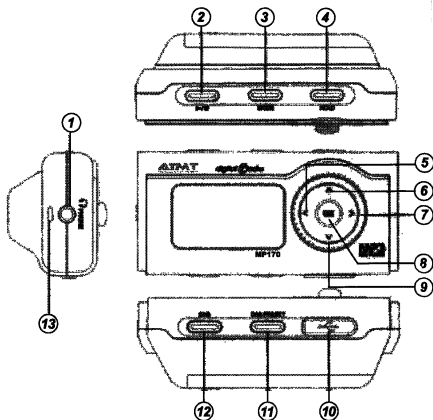

The earphones cable also serves as an aerial. To get optimal signal reception, avoid coiling the earphone cord. And using the original earphone is highly recommended.

1. Earphone Jack
2. Power On/ Off/ Play/ Pause/ Cancel
3. Mode Change
4. Hold On/ Off
5. Previous/ REW
6. Up
7. Next/ FF
8. Confirm Menu/ Navi
9. Down
10. USB Connector
11. Save/ Delete/ Preset
12. DAB Record Start/ Stop
13. Strap Hole

1 Install the driver

- 1.1 Windows ® 98SE users: Please install the driver from the bundled CD disc.
After installation is finished, please restart your computer ;
- 1.2 Windows ® Me/2000/XP/Mac ® OS X 10.2.6 users: No need to install driver.
Note: If the 'New Hardware' wizard appears, press 'Next'.

2 Connect Digital Music Player to USB port

- 2.1 Remove the USB port cover of the player.
- 2.2 Connect the player into the USB port on your personal computer (PC) using a USB cable.
- 2.3 The built-in LCD displays 'MTP Connected', indicating that the player is in USB mode. The player is then automatically recognized on your computer (in 'My Computer') as a removable media device.

3 Preparing your music files

- 3.1 In order to play music on your Digital Music Player the music files must first be saved onto your PC. Music files can be put onto your PC by either:
 - a) Uploading them from your CD collection, OR ;
 - b) Downloading them from online stores
- 3.2 Where on my PC can I store my music?

Music can be stored in the 'My Music' folder on your C:drive either directly or via a music management program such as Windows Media Player version 10. Details of how to use Windows Media Player can be found on the microsoft website (www.microsoft.com).
(<http://www.microsoft.com/windows/windowsmedia/mp10/usingplayer.aspx>)

3.3 What format should my music be in?

Make sure your music files are in a compressed file format that can be transferred to your Digital Music Player. We recommend the files are WMA (e.g. <filename.wma>) since these offer superior quality sound at a fraction of the size of MP3 files. You can use Windows Media Player to convert your CDs into WMA format. This process is called ripping.

4 Ripping

When ripping CD's you can choose the bit rate (audio quality). The higher the bit rate, the higher the quality music but the larger the file. We recommend 64Kbps for WMA and 128Kbps for MP3 files.

When ripping CD's make sure the copy protect feature is disabled, see below for details:

- Start Windows Media Player
- Right click on the bar at the top of the Windows Media Player window and select 'Tools' and then 'Options'.
- In the window that appears choose the 'Rip music' tab
- Ensure the tick is removed from the 'copy protect music' box.
- Click OK and copy your music to your PC.

Once all your music files are in WMA (or MP3) format...

5 Transfer your music

5.1 Transfer your music files to your Digital Music Player using either Windows explorer or the Sync feature in the Windows Media Player.



Note : The Sync feature must be used for transferring copy protected (DRM) files.

5.2 When your player has finished copying and the LCD displays 'MTP Connected', unplug the player from your computer using the 'Safely Remove Hardware' icon.

6 Installing the battery & earphone

- 6.1 Slide off the battery cover and insert 1 x AA/LR6 battery (not included) into the battery compartment observing the correct polarities.
- 6.2 Connect the earphone to the earphone socket.


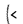
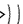

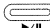
7 Turning the player ON


- 7.1 Press and hold the  button until the player turns on.
- 7.2 Use the player controls to adjust playback and volume level.
- 7.3 Press the  button to start music playback.

8 Turning the player OFF

- 8.1 Press and hold the Power Off button for about 3 seconds to turn off the player.

9 Menu

 - 9.1 Turn your player on and press and hold the MENU  button until the main menu appears.
- 9.2 Press the SKIP ( / ) buttons to scroll through the options and the MENU  button to chose the option you require.
- 9.3 To exit the menu, press  button to return to your music.

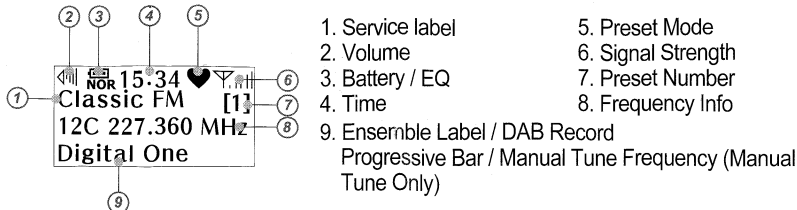


 
 
10 Manual Tune to stations

With the first line highlighted :

10.1 Press and hold the (< or >) on the control stick to select your desired service.

10.2 The player will highlight the line and step through the available stations.


Press  button when required station appears. The player will display present service information.




■ Note

- Area factory default value is UK.
- When using for the first time, the unit will start AUTO SCAN automatically.

11 To save service to Preset list

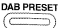 11.1 Press the  button to save current service. 'save preset?' screen will be displayed on LCD screen.



— Preset Memory

 
— Current Service

■ Note

- Second line shows which service had been saved in selected preset number.
- Fourth line shows the current services which user desired to save.

11.2 Press ((< or >)) button to change preset memory number.


At desired preset number, please press  button to save.






■ Note

- Up to 20 presets can be stored.
- If the selected preset number is empty, the display will shows 'Empty'.
- To cancel anything, press Play button.

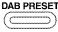12 Preset tune

If preset icon is not displayed, first press and hold  button to enter preset tuning mode.

 
Now pressing ( or ) will show saved preset list.




■ Note

- If there are no services in the preset list, the tune mode will be changed to manual mode automatically. Please auto scan first.
- The frequency of manual tune is not saved, last frequency of preset tune mode will be tuned when user changes tune mode to preset.

13 To delete service from Preset list

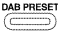13.1 Press  button to delete current service from preset list.
'Delete preset' screen will be displayed on LCD screen.

 13.2 Press  button to delete.




13.3 After deleting, previous service will be tuned.

■ Note

- Preset deleting is only activated in Preset mode.

 See the User's Manual on the bundled CD for more detailed information.

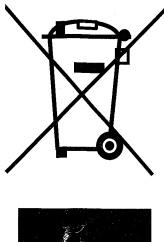

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.